




REVISED 04 : 02 / 12 / 05 FOR FM ONLY , 24 HOURS
MODEL CR19 / SCOTT CMX98 / ENGLISH I/M , 230V




 **SCOTT**

CMX98

VERTICAL DIGITAL CLOCK RADIO

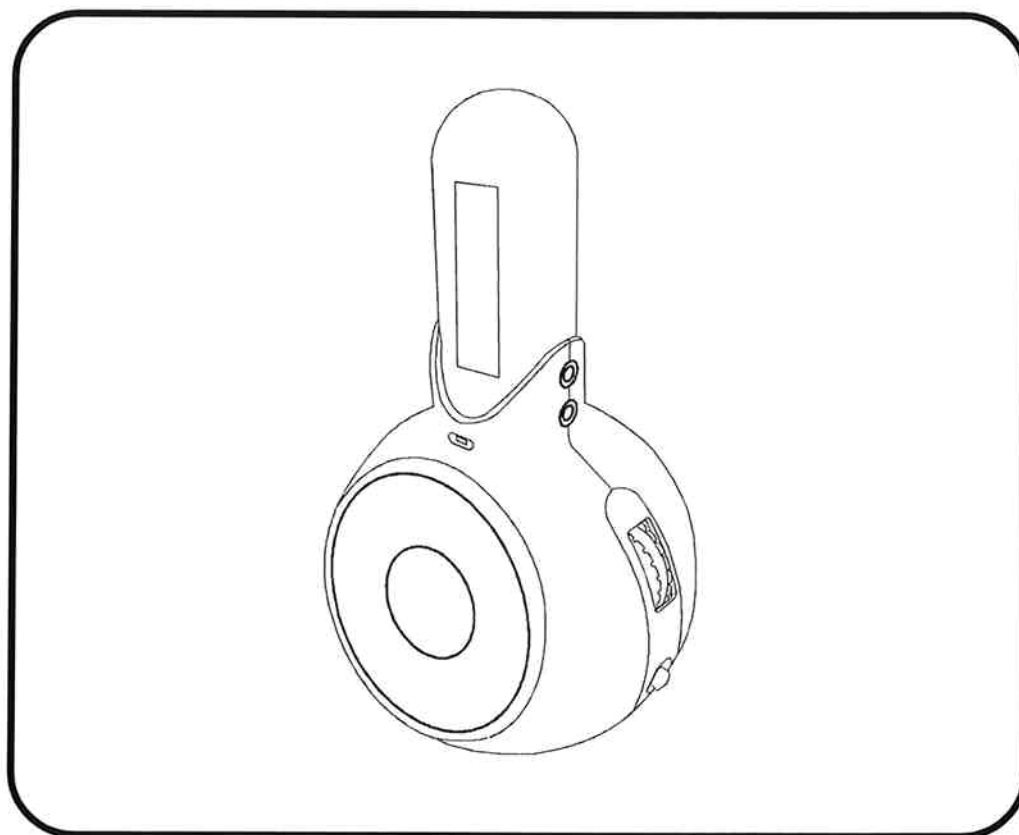

OPERATING INSTRUCTIONS



WARNINGS

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

ATTENTION

To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside the unit. Refer all servicing to qualified personnel.



The lightning flash with arrowhead symbol within the triangle is a warning sign alerting the user of "dangerous voltage" inside the unit.



The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

WARNING

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

IMPORTANT

DO NOT THROW BATTERIES IN FIRE!
THE APPARATUS SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING.

ENSURE A MINIMUM DISTANCE OF 5 CM AROUND THE APPARATUS FOR SUFFICIENT VENTILATION.

ENSURE THAT THE VENTILATION IS NOT IMPEDED BY COVERING THE VENTILATION OPENINGS WITH ITEMS, SUCH AS NEWSPAPERS, TABLE-CLOTHS, CURTAINS, ETC..

DO NOT PLACE NAKED FLAME SOURCES, SUCH AS LIGHTED CANDLES ON THE APPARATUS.

TAKE ATTENTION TO THE ENVIRONMENTAL ASPECTS OF BATTERY DISPOSAL.

USE THE APPARATUS ONLY IN MODERATE CLIMATES (NOT IN TROPICAL CLIMATES).


DO NOT EXPOSE THE APPARATUS TO DRIPPING OR SPLASHING.

DO NOT PLACE OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, ON THE APPARATUS.


IN CASE OF MISFUNCTION DUE TO ELECTROSTATIC DISCHARGE THE APPARATUS HAS TO BE RESET BY DISCONNECTING IT FROM MAINS SUPPLY.

PLEASE ENSURE TO PLACE YOUR CLOCK ON A STABLE STAND TO AVOID ANY RISK OF DROP.
ALWAYS KEEP YOUR CLOCK AWAY FROM THE EDGE OF THE FURNITURE TO PREVENT IT FALLING OFF WHEN YOU USE THE SNOOZE FUNCTION.

GB-1



LOCATIONS OF PARTS AND CONTROLS

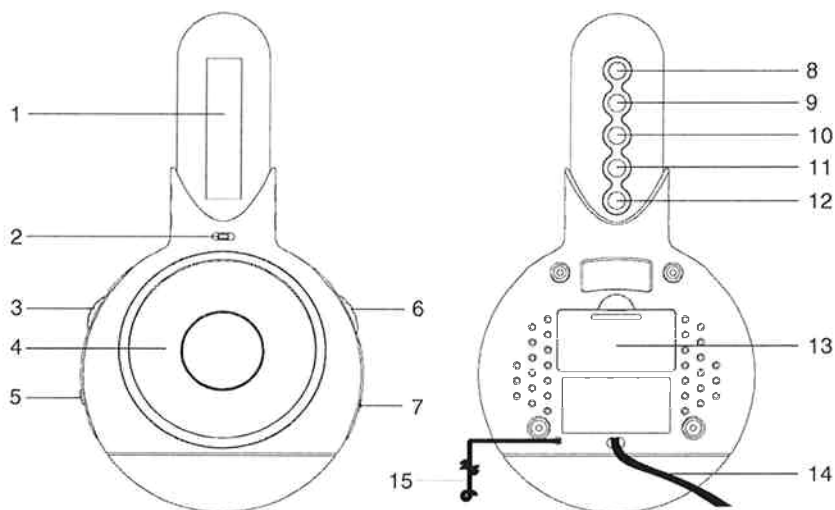


1. LED display
2. Alarm indicator
3. Volume control
4. Speaker
5. Function / Alarm switch
6. Tuning control
7. Tone selector

8. Sleep button
9. Time set button
10. Alarm set button
11. Hour set button
12. Minute set button
13. Battery compartment
14. AC power cord
15. Wire Antenna

POWER SUPPLY

This unit is designed to operate from AC230 ~ 50Hz household mains supply. The 9V type (1x006p not included) battery is used for clock back up only.

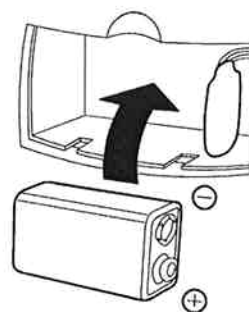

LISTENING TO RADIO

1. Slide the Function / Alarm Switch to "ON" position.
2. Slide the Tone Selector to "HI" or "LO" position for desired high frequency.
3. Adjust the Volume Control for a desired listening level and select your favourite station with the Tuning control.
4. To turn off the radio, slide the Function / Alarm Switch to "AUTO" or "AL" to set the radio or buzzer alarm.

TO SET THE TIME

1. Press and hold the Time set button.
2. Press the Hour set button to advance the hour display.
3. Press the Minute set button to advance the minute display until the correct time appears on the time display.
4. Release the Time set button. The correct time is shown on display.

GB-2



TO SET THE ALARM

1. Press and hold the Alarm set button while repeating step 2 and 3 described under "TO SET THE TIME" to set the desired wake-up time.
2. To check the correct alarm time, press the Alarm set button.


USING THE RADIO / BUZZER ALARM

1. Set the alarm as shown in "TO SET THE ALARM".
2. Follow the procedure in "LISTEN TO THE RADIO" to tune the desired station.
3. Set the Volume Control to your required listening level.
4. Slide the Function / Alarm Switch to "AUTO" position. The alarm indicator lights up and the radio will turn on to wake you up at the preset time.
5. To wake to the buzzer instead of the radio, set the alarm as shown in "TO SET THE ALARM". Slide the Function / Alarm Switch to "ALARM" position. The buzzer will turn on to wake you up at the preset time.
6. Press the Alarm set button to turn off the alarm and wake at the same time tomorrow.

SWINGING SNOOZE FUNCTION

When the radio or buzzer sounds, swing the unit to switch off the alarm. Approximately 9 minutes later, the alarm will switch on again. This snooze cycle will be activated up to 5 times within an hour period. To stop the snooze cycle, slide the Function / Alarm switch to "OFF" position or press Alarm set button.

Note : The snooze switch makes a faint rattle when the unit is swung.

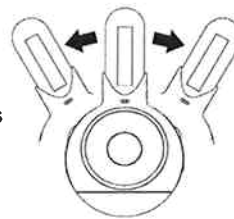

SLEEP FUNCTION

1. Set the Function / Alarm Switch to "ALARM", "AUTO" or "OFF" position.
2. Press the Sleep button. The clock display will show 59 minutes. The radio turns on and off automatically after 59 minutes.
3. To reduce the automatic shut off time, hold down the Sleep button and press the Minute set button to adjust to the desired sleep time.
4. To set the automatic play for up to 1 hour and 59 minutes, press and hold the Sleep button and press the Hour set button once. The clock will read 1 hour 59 minutes.
5. To turn the radio off prior to the preset sleep time, simply swing the unit.

ANTENNA

The FM radio has a flexible wire antenna on the back of the unit, uncoil the wire and extend to its full length for best reception.

SPECIFICATIONS

Power Source:	AC : 230V ~ 50Hz DC : 9V backup (1x006P)
Frequency range:	FM : 87.5 - 108 MHz
Dimension:	146(L) x 135(D) x 262(H) mm
Weight:	1.4Kg

Due to continuing improvement, the features and the design are subject to change without notice.



If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)

GB-3

